



WALK-IN REPLACEMENT DOOR

MEASURING GUIDE

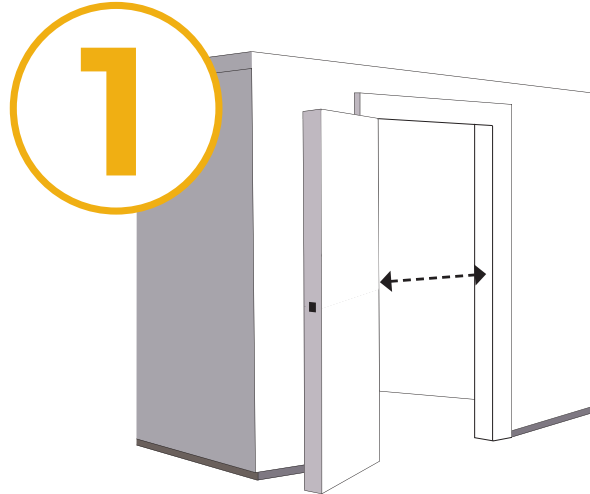

DOOR OPENING WIDTH

Supply the narrowest dimension for the width of the door opening.

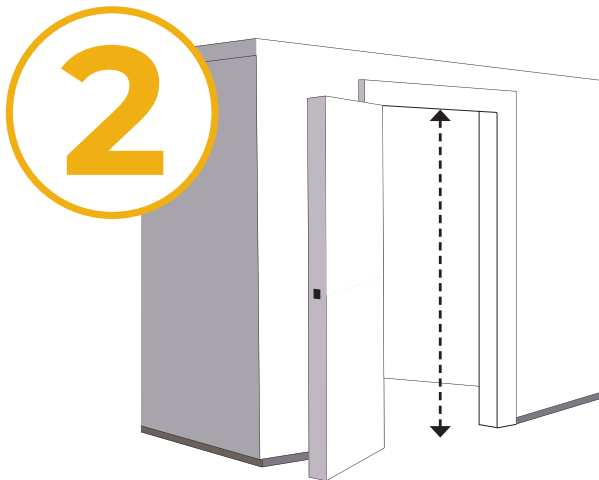

DOOR OPENING HEIGHT

Supply the narrowest dimension for the height of the door opening.



WALL THICKNESS

Measure the thickness of the existing wall. DO NOT include the thickness of the door frame.